

ROCKET 11

Bulk Spool Termination Manual

Thank you for choosing AudioQuest. This manual provides instruction for preparing and terminating a bulk (unterminated) speaker cable.

Please be careful when using sharp tools. We recommend wearing safety glasses.

To terminate AudioQuest speaker cables you will need the following tools:


- Sharp knife or razor blade
- 1.5 mm. Hex (Allen) wrench
- Small Philips screwdriver




1. Strip cable back 6.25".



2. Remove the PVC jacket.

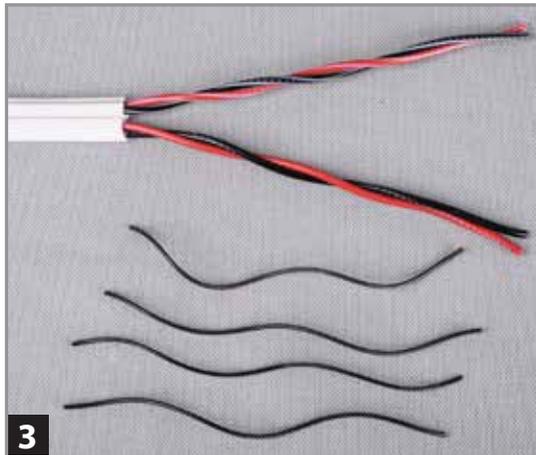

3. Remove the 4 PVCC fillers.

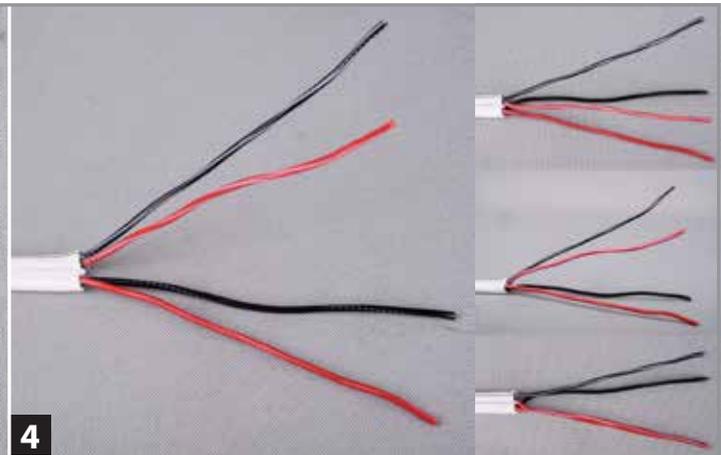

4. Pick one side with the red and black leads for the treble and the other for the bass. Separate the red to the right and the black to the left. Orientate the treble leads above the bass leads.

ROCKET 11


Bulk Spool Termination Manual




5. Feed the leads into the pants carefully so that the correct lead is in the correct leg of the pants.




6. Push the pants on until they stop. The leads should be coming out of the ends of the legs.

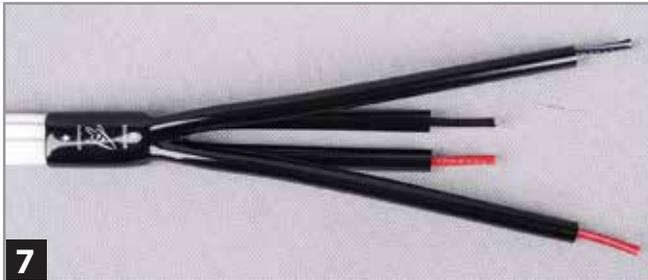

7. Trim the leads to 0.75"

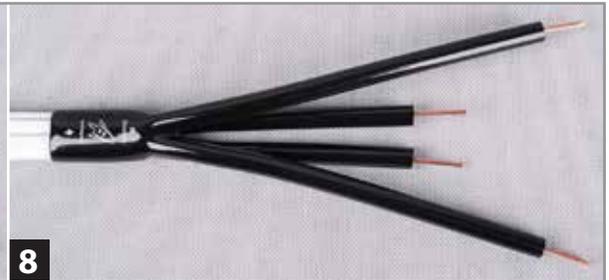

8. Strip the PVC to expose the bare wire.

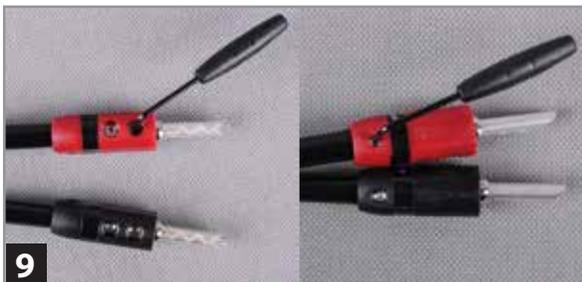

9. Insert the Red wire pair into a red-stripe speaker connector and tighten the connector's screws using a hex allen wrench. Insert the Black wire pair into a black-stripe speaker connector and tighten the connector's screws using a hex allen wrench.



10. Ensure all connections are secure.